

# STARPAK INSTRUCTION

## CONTENTS

---

1.0 Cubic Yard Polywoven Bag w/Inserts  
Heavy Duty Liner  
Closure Tie

## Instruction

---

Step 1: Unfold container once until two sides are at 90 degrees to each other (see picture).

Step 2: Locate lift loop on inner fold

Step 3: Place foot on side of container currently resting on ground and with your hand, pull lift loop until remaining sides "pop" out thus forming a box (see picture).

Step 4: Pull the closure flap out and around the outside of the container to make the interior cavity of container easily accessible.



Step 5: Stretch the Liner's extra portion out and around the container's outer walls to make the interior cavity of container easily accessible

Step 6: Fill container with materials

Step 7: Once full, twist the liner top and close with closure tie.

Step 8: Fold the closure flap. Locate the ties and loops. Insert the tail of one tie through the loop on the side of the bag and tie a knot to secure. When tying knots, use any means practical to secure and ensure closure

*If you are experiencing any difficulties assembling your container, please call us immediately.*

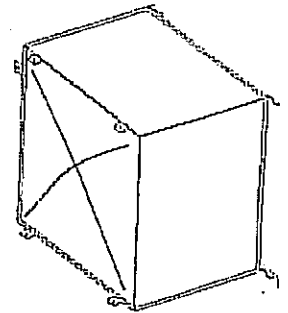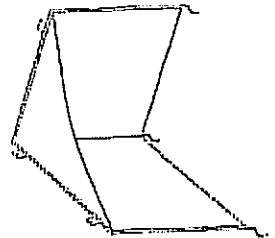

---

330-966-2070  
[www.QuestarUSA.com](http://www.QuestarUSA.com)  
[info@QuestarUSA.com](mailto:info@QuestarUSA.com)

**Questar Inc,**  
Packaging Solutions for the Waste Industry

6615 Promway Ave NW  
North Canton OHIO 44720