

NOVA

INSTRUCTIONS

Contents

1.6 Cubic Card Polywoven Bag w/Inserts
Heavy Duty Liner
Closure Tie

Instructions

Step 1: Unfold container once until two sides are at 90 degrees to each other (see picture).

Step 2: Locate lift loop on inner fold (see picture).

Step 3: Place foot on side of container currently resting on ground and with your hand, pull lift loop until remaining sides “pop” out thus forming the box (see picture).

Step 4: If unit is to be mounted on pallet, locate loops on each lower corner and secure with nails to pallet. At your request, Questar can supply nails with large heads.

Step 5: Pull the tri-fold flaps out and around the outside of the container to make the interior cavity of the container easily accessible.



Step 6: Place liner in the container. Stretch the liner’s extra portion out and around the container’s outer walls to make the interior cavity of container easily accessible.

Step 7: Fill container with materials.

Step 8: Once full, twist the liner top and close with closure tie.

Step 9: Secure the tri-fold flaps.

If you are experiencing any difficulties assembling your container, please call us immediately.

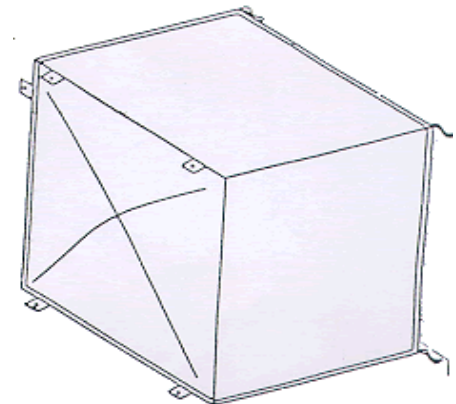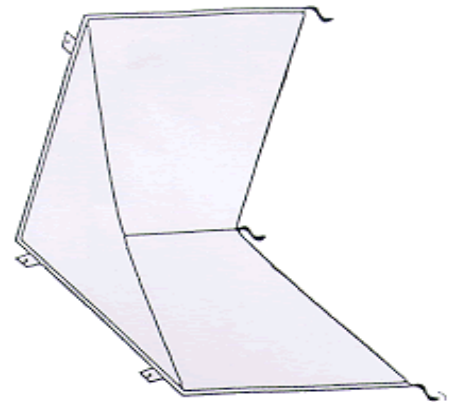

Questar, Inc

Packaging Solutions For The Waste Industry

(330)966-2070
www.QuestarUSA.com
info@QuestarUSA.com

6615 Promway NW
North Canton, Ohio 44720